

3. ADDRESS BOOK


1. NAVIGATION SETTINGS

Points or areas on the map can be registered.

The registered points can be used on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 71, and "DESTINATION SEARCH BY "Address Book"" on page 83.)

Registered areas to avoid, will be avoided when the system searches for a route.

- 1 Press the "MENU" button on the Remote Touch.

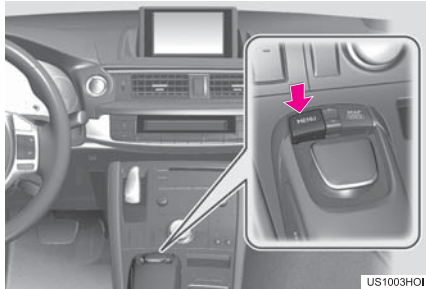

US1003H01

- 2 Select "Setup".




US1001LI

- 3 Select "Navigation".



US2007LI

- 4 Select the desired items to be set.

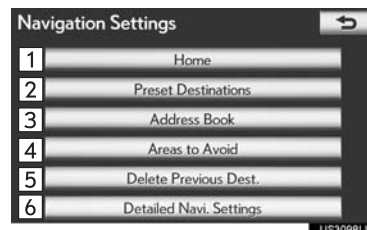

US3098LI


- On this screen, the following operations can be performed:

No.	Function	Page
1	Select to set home.	111
2	Select to set preset destinations.	113
3	Select to set the address book.	116
4	Select to set areas to avoid.	121
5	Select to delete previous destinations.	126
6	Select to set detailed navigation settings.	127

SETTING UP THE "Home"

If home has been registered, that information can be recalled by selecting **"Go Home"** on the "Destination" screen. (See "DESTINATION SEARCH BY HOME" on page 71.)

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Navigation"** on the "Setup" screen.
- 4 Select **"Home"**.

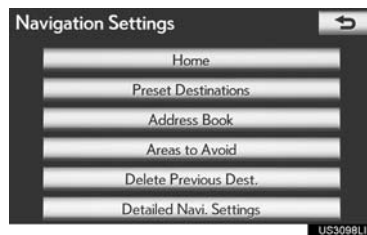

- 5 Select the desired screen button.




No.	Function	Page
1	Registering home	111
2	Editing home	112
3	Deleting home	113

3

NAVIGATION SYSTEM


REGISTERING HOME

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Home"** on the "Navigation Settings" screen.
- 4 Select **"Set Home"**.

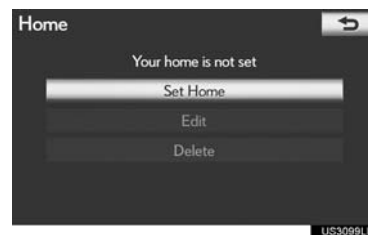

3. ADDRESS BOOK

- 5 Select the desired screen button and enter the location in the same way as for a destination search. (See “DESTINATION SEARCH” on page 70.)

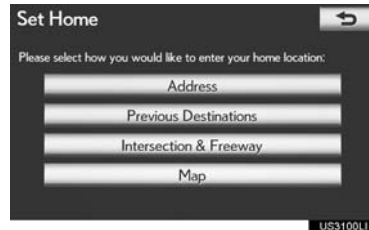

- When registration of home is completed, the “Edit Home” screen will be displayed.

- 6 Select “OK”.


- To edit registered information, see “EDITING HOME” on page 112.

EDITING HOME

- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Navigation” on the “Setup” screen.
- 3 Select “Home” on the “Navigation Settings” screen.
- 4 Select “Edit”.



- 5 Select “Edit” next to the item to be edited.

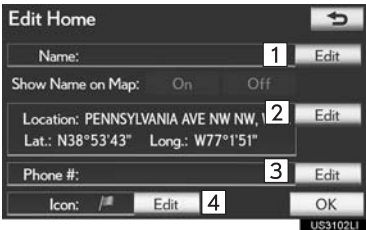

No.	Function	Page
1	Select to edit the home name. The name can be displayed on the map.	119
2	Select to edit location information.	119
3	Select to edit the phone number.	120
4	Select to change the icon to be displayed on the map.	118

“Show Name on Map”: The name of a home can be set to be displayed on the map by selecting “On” or “Off”. (See page 119.)

- 6 Select “OK”.

DELETING HOME

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Home"** on the "Navigation Settings" screen.
- 4 Select **"Delete"**.




- 5 Select **"Yes"** to delete home and select **"No"** to cancel the deletion.


SETTING UP THE "Preset Destinations"

If preset destination has been registered, that information can be recalled by using **"Preset Destinations"** on the "Navigation Settings" screen. (See "DESTINATION SEARCH BY PRESET DESTINATIONS" on page 71.)

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Navigation"** on the "Setup" screen.
- 4 Select **"Preset Destinations"**.

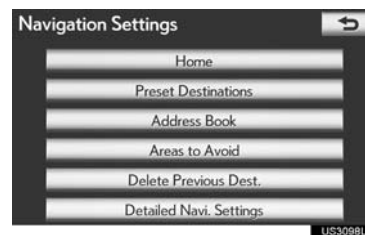


- 5 Select the desired screen button.

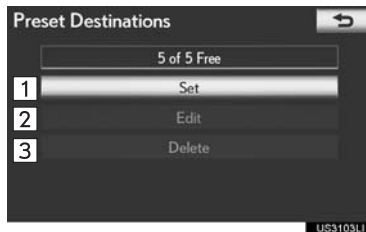


No.	Function	Page
1	Registering a preset destination	114
2	Editing a preset destination	115
3	Deleting a preset destination	115

REGISTERING PRESET DESTINATIONS


- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Preset Destinations" on the "Navigation Settings" screen.
- 4 Select "Set".

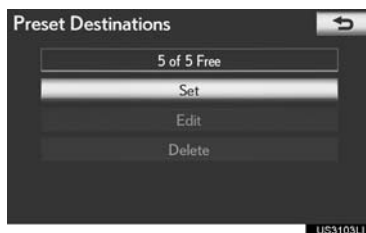

- 5 Select the desired screen button and enter the location in the same way as for a destination search. (See "DESTINATION SEARCH" on page 70.)

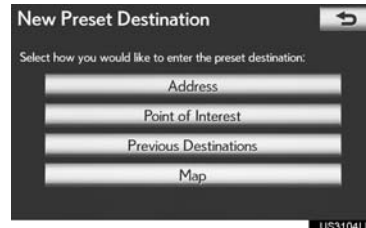

- 6 Select a position for this preset destination.

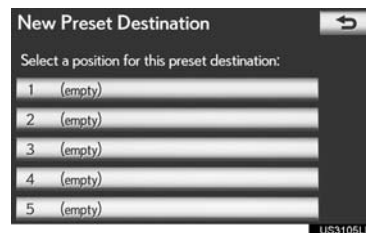

- When registration of a preset destination is completed, the "Edit Preset Destination" screen will be displayed.

- 7 Select "OK".

- To edit registered information, see "EDITING PRESET DESTINATIONS" on page 115.

EDITING PRESET DESTINATIONS


- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the **"Setup"** screen.
- 3 Select **"Preset Destinations"** on the **"Navigation Settings"** screen.
- 4 Select **"Edit"**.



- 5 Select the screen button of the desired preset destination.



- 6 Select **"Edit"** next to the item to be edited.

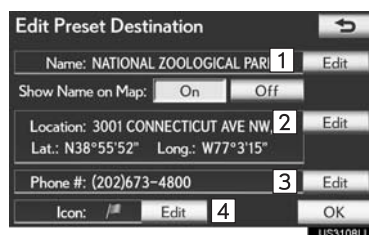

No.	Function	Page
1	Select to edit the preset destination name. The name can be displayed on the map.	119
2	Select to edit location information.	119
3	Select to edit the phone number.	120
4	Select to change the icon to be displayed on the map.	118

3

NAVIGATION SYSTEM

"Show Name on Map": The name of a preset destination can be set to be displayed on the map by selecting **"On"** or **"Off"**. (See page 119.)

- 7 Select **"OK"**.

DELETING PRESET DESTINATIONS

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the **"Setup"** screen.
- 3 Select **"Preset Destinations"** on the **"Navigation Settings"** screen.

3. ADDRESS BOOK

4 Select "Delete".



5 Select the preset destination to be deleted.



Screen button	Function
"Select All"	Select all preset destinations.
"Unselect All"	Select to cancel the "Select All" function.


6 Select "Delete".

7 Select "Yes" to delete the preset destination and select "No" to cancel the deletion.


SETTING UP THE "Address Book"

Points or areas on the map can be registered.

- 1 Press the "MENU" button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select "Setup" on the "Menu" screen.
- 3 Select "Navigation" on the "Setup" screen.
- 4 Select "Address Book".

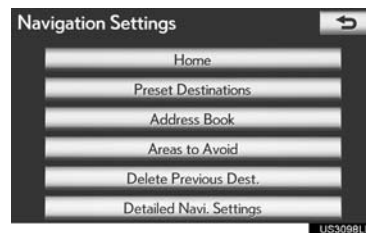


5 Select the desired screen button.

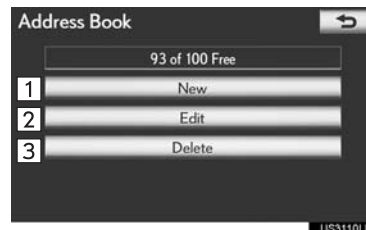


No.	Function	Page
1	Registering address book entries	117
2	Editing address book entries	117
3	Deleting address book entries	120

REGISTERING ADDRESS BOOK ENTRIES

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Address Book"** on the "Navigation Settings" screen.
- 4 Select **"New"**.

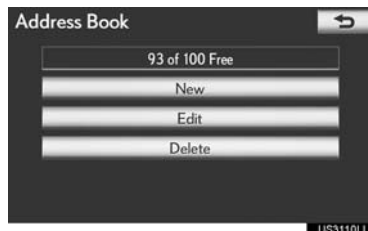

- 5 Select the desired screen button and enter the location in the same way as for a destination search. (See "DESTINATION SEARCH" on page 70.)

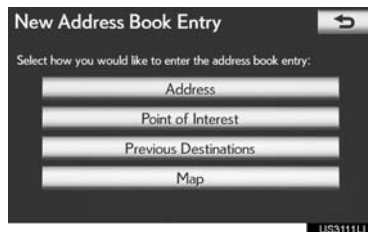

- After the address book entry has been registered, the "Edit Address Book Entry" screen will be displayed.

- 6 Select **"OK"**.

- To edit registered information, see "EDITING ADDRESS BOOK ENTRIES" on page 117.


INFORMATION

- Up to 100 address book entries can be registered.


EDITING ADDRESS BOOK ENTRIES

The icon, name, location and/or phone number of a registered address book entry can be edited.

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Address Book"** on the "Navigation Settings" screen.
- 4 Select **"Edit"**.

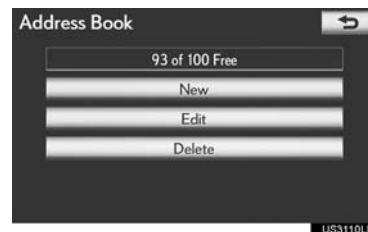


- 5 Select the screen button of the desired address book entry.

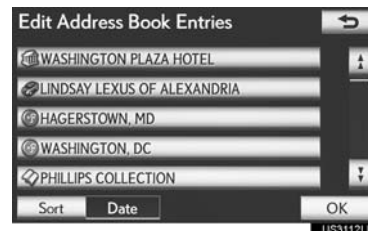

3. ADDRESS BOOK

- 6 Select “Edit” next to the item to be edited.

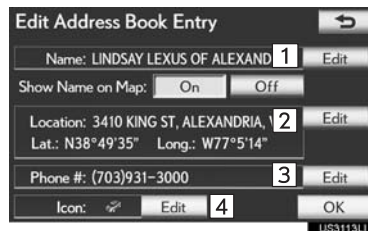


No.	Function	Page
1	Select to edit the address book entry name. The name can be displayed on the map.	119
2	Select to edit location information.	119
3	Select to edit the phone number.	120
4	Select to change the icon to be displayed on the map.	118

“Show Name on Map”: The name of an address book entry can be set to be displayed on the map by selecting “On” or “Off”. (See page 119.)


- 7 Select “OK”.

■ TO CHANGE “Icon”

- 1 Select “Edit”.

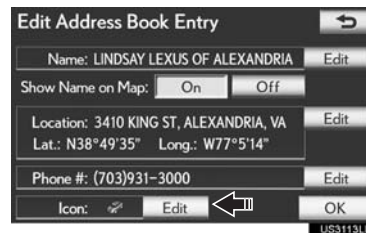

- 2 Select the desired icon.

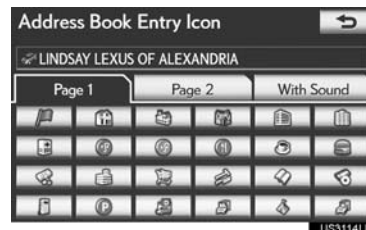


- Change pages by selecting the “Page 1”, “Page 2” or “With Sound” tab.



■ SOUND ICONS

A sound for some address book entries can be set. When the vehicle approaches the location of the address book entry, the selected sound will be heard.

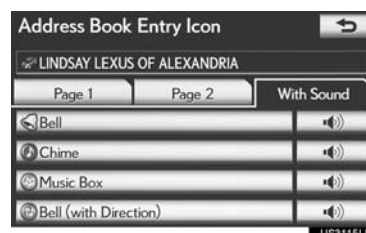- 1 Select the “With Sound” tab on the “Address Book Entry Icon” screen.
- 2 Select the desired sound icon.



- The next screen appears when “Bell (with Direction)” is selected.

- 3 Select either  or  to adjust the direction. Then select "OK".




INFORMATION


- The bell sounds only when the vehicle approaches this point in the direction that has been set.

TO CHANGE "Name"

- 1 Select "Edit".

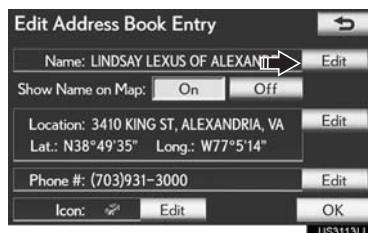


- 2 Enter the name using the alphanumeric keys.

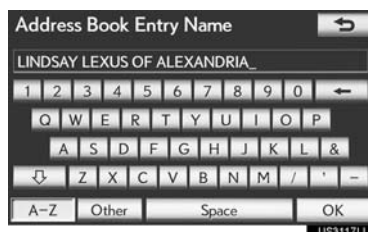

- Up to 70 characters can be entered.
- 3 Select "OK".
- The previous screen will be displayed.


DISPLAYING ADDRESS BOOK ENTRY NAMES


- 1 Select "On" to display the name on the map and select "Off" to not display it.

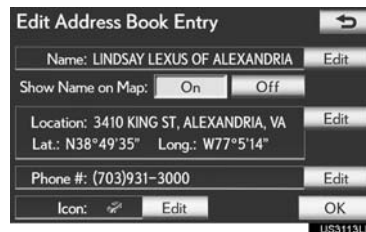

TO CHANGE "Location"

- 1 Select "Edit".

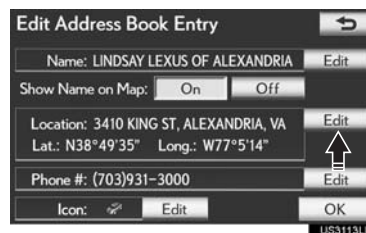

- 2 Select one of the 8 directional screen buttons to move the cursor  to the desired point on the map.



- 3 Select "OK".

- The previous screen will be displayed.


3

NAVIGATION SYSTEM


3. ADDRESS BOOK

■ TO CHANGE "Phone #" (PHONE NUMBER)

- 1 Select "Edit".

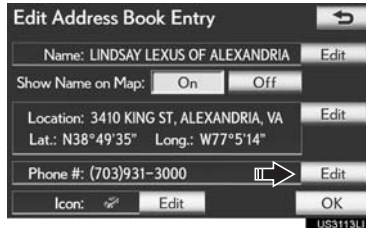

- 2 Enter the number using the number keys.

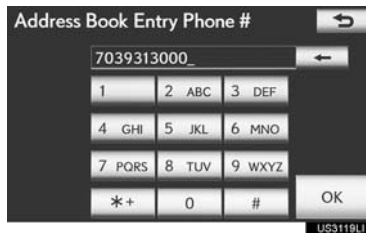


- 3 Select "OK".

- The previous screen will be displayed.


DELETING ADDRESS BOOK ENTRIES

- 1 Press the "MENU" button on the Remote Touch, then select "Setup".
- 2 Select "Navigation" on the "Setup" screen.
- 3 Select "Address Book" on the "Navigation Settings" screen.

- 4 Select "Delete".

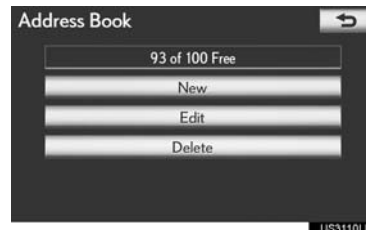

- 5 Select the address to be deleted.

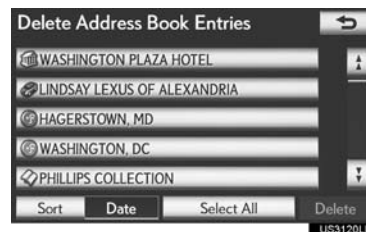

Screen button	Function
"Select All"	Select all registered addresses.
"Unselect All"	Select to cancel the "Select All" function.


- 6 Select "Delete".

- 7 Select "Yes" to delete the address book entries and select "No" to cancel the deletion.

SETTING UP THE "Areas to Avoid"

Areas to be avoided because of traffic jams, construction work or other reasons can be registered as areas to avoid.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Navigation"** on the "Setup" screen.
- 4 Select **"Areas to Avoid"**.

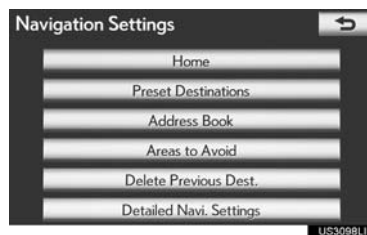


- 5 Select the desired screen button.



No.	Function	Page
1	Registering areas to avoid	121
2	Editing areas to avoid	122
3	Deleting areas to avoid	125

REGISTERING AREAS TO AVOID


- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the "Setup" screen.
- 3 Select **"Areas to Avoid"** on the "Navigation Settings" screen.
- 4 Select **"New"**.

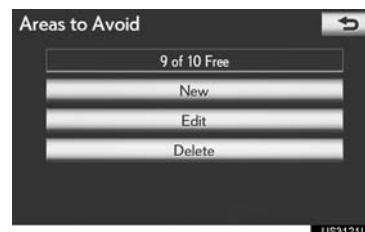

3 NAVIGATION SYSTEM

3. ADDRESS BOOK

- 5 Select the desired screen button and enter the location in the same way as for a destination search, or display the map of the area to be avoided. (See “DESTINATION SEARCH” on page 70.)

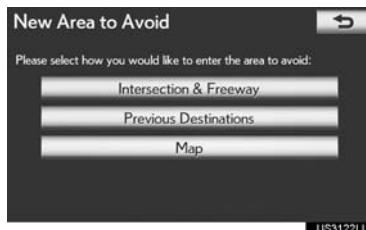



- 6 Scroll the map to the desired point.



“Adjust Location”: Select to adjust the position in smaller increments.

- 7 Select “Enter”.

- 8 Select either  or  to change the size of the area to be avoided.



- 9 Select “OK”.

- When registration of an area to avoid is completed, the “Area to Avoid” screen will be displayed.

INFORMATION

- If a destination is input in the area to avoid or the route calculation cannot be made without running through the area to avoid, a route passing through the area to be avoided may be shown.
- Up to 10 locations can be registered as points/areas to avoid.


EDITING AREA TO AVOID

The name, location and/or area size of a registered area can be edited.


- 1 Press the “MENU” button on the Remote Touch, then select “Setup”.
- 2 Select “Navigation” on the “Setup” screen.
- 3 Select “Areas to Avoid” on the “Navigation Settings” screen.
- 4 Select “Edit”.



- 5 Select the area to be avoided.

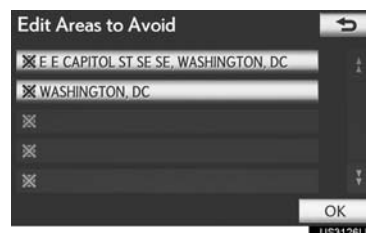

- 6 Select “Edit” next to the item to be edited.

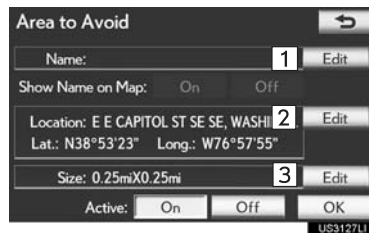

No.	Function	Page
1	Select to edit the name of the area to avoid. The name can be displayed on the map.	123
2	Select to edit area location.	124
3	Select to edit area size.	124


“Show Name on Map”: The name of an area to be avoided can be set to be displayed on the map by selecting “On” or “Off”. (See page 123.)

“Active”: The area to avoid feature can be set to “On” or “Off”.

- 7 Select “OK”.

■ TO CHANGE “Name”

- 1 Select “Edit”.

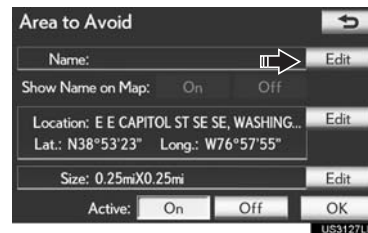

- 2 Enter the name using the alphanumeric keys.




- Up to 70 characters can be entered.

- 3 Select “OK”.

- The previous screen will be displayed.

■ DISPLAYING NAMES OF AREAS TO BE AVOIDED


- 1 Select “On”, next to “Show Name on Map”, to display the name of an area to be avoided on the map. Select “Off” not to display it.

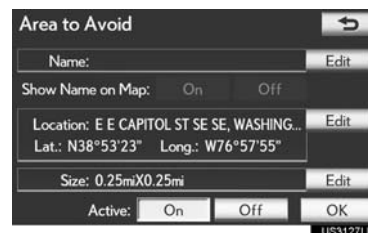


3. ADDRESS BOOK

■ TO CHANGE "Location"

- 1 Select "Edit".

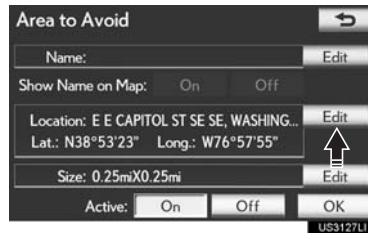

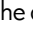- 2 Select one of the 8 directional screen buttons to move the cursor  to the desired point on the map.






- 3 Select "OK".

- The previous screen will be displayed.

■ TO CHANGE "Size"

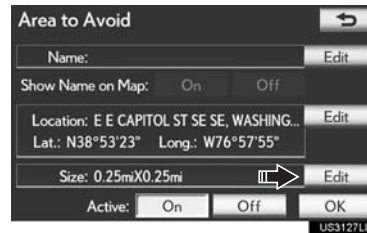- 1 Select "Edit".



- 2 Select either  or  to change the size of the area to be avoided.



- 3 Select "OK".


- The previous screen will be displayed.

DELETING AREAS TO AVOID

- 1 Press the **"MENU"** button on the Remote Touch, then select **"Setup"**.
- 2 Select **"Navigation"** on the **"Setup"** screen.
- 3 Select **"Areas to Avoid"** on the **"Navigation Settings"** screen.
- 4 Select **"Delete"**.
- 6 Select **"Delete"**.
- 7 Select **"Yes"** to delete the area(s) and select **"No"** to cancel the deletion.



- 5 Select the area to be deleted.

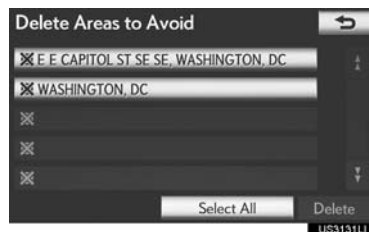


Screen button	Function
"Select All"	Select all registered areas to avoid.
"Unselect All"	Select to cancel the "Select All" function.

3. ADDRESS BOOK


DELETING PREVIOUS DESTINATIONS

Previous destinations can be deleted.

- 1 Press the **"MENU"** button on the Remote Touch. (See "Remote Touch" on page 10.)
- 2 Select **"Setup"** on the "Menu" screen.
- 3 Select **"Navigation"** on the "Setup" screen.
- 4 Select **"Delete Previous Dest."**.

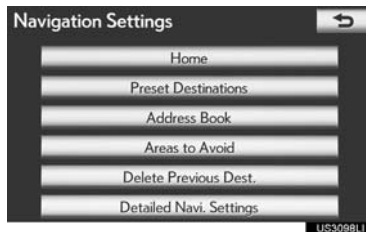

- 5 Select the previous destination to be deleted.

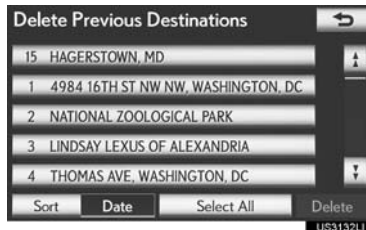

Screen button	Function
"Select All"	Select all previous destinations.
"Unselect All"	Select to cancel the "Select All" function.

- 6 Select **"Delete"**.
- 7 Select **"Yes"** to delete the destination(s) and select **"No"** to cancel the deletion.